


ARA Neoteric Lighting Design

Assembly and **Installation Instructions** for Model's

20060/1/2WV

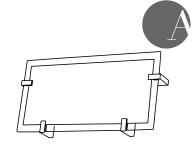


CAUTION - RISK OF FIRE

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation

Warning please make sure the electrical breaker is shut off before commencing with this installation Read and familiarize yourself with these instructions before commencing

This fixture is certified for wall mounting only and is suitable for Damp locations and dimmable with a Triac Dimmer The fixture uses a 120v A/C LED panel which is supplied with a clear glass cover plate, no driver required

Package Contents		
Part	Description	Qty
Α	Universal mounting plate	1
В	J-Box mounting bolts	2
С	Wire connectors	3
D	Fixture assembly	1
Е	Fixture mounting screw	1
F	Glass panel	1

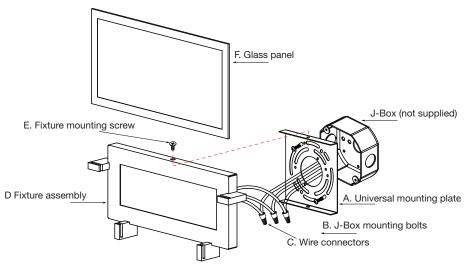

Installing the fixture please ensure the electrical breaker is switched off before commencing Junction-Box Attach the Universal mounting plate (A) with the two supplied mounting bolts (B) to the Junction-Box making sure the flat part of the mounting plate facing upwards. Use a spirit level to ensure that top of the plate is level Connect the Supply wires to the Fixture wires using the supplied Electrical wire connectors (c). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the Electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape. Attach the Fixture assembly (D) to the Fixture mounting plate (A) and with the supplied Fixture mounting screws (E) and secure from the top. Attach the Glass panel (F) by gently seating it in the glass mounting brackets on each end of the Fixture assembly (D). Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use