


ASSEMBLY INSTRUCTIONS FOR YOUR LOGAN FLOOR LAMP

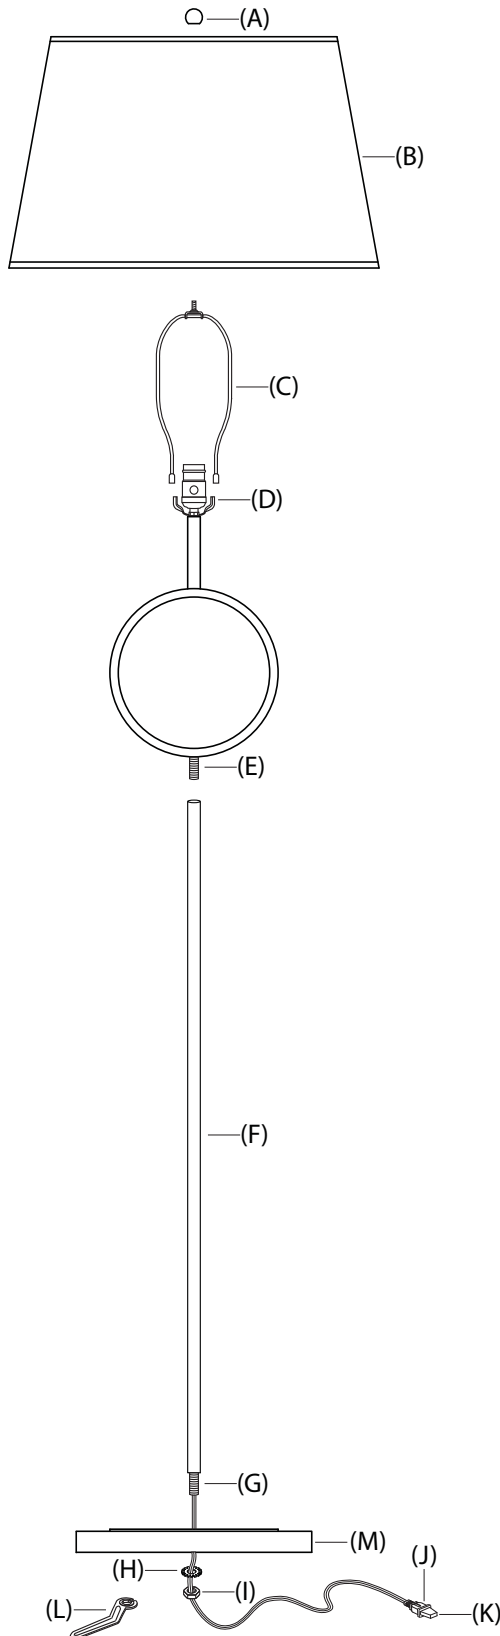

SAFETY INSTRUCTIONS:

- * This lamp comes with a polarized plug as a feature to reduce the risk of electrical shock. If the plug does not fit into your outlet, contact a licensed electrician.
- * NEVER alter the plug.
- * Remove plug from wall outlet before replacing light bulb.
- * Do not connect the electricity until lamp is fully assembled.

ASSEMBLY INSTRUCTIONS:

1. Unpack all parts and place them on a level surface.
2. Thread column (F) onto threaded nipple (E). Pull cord taught from below column (F) to prevent damage to the wire.
2. Align column (F) with base (M). Place threaded tube (G) through hole in the center of base (M). Pull cord taught from below base (M) to prevent damage to the wire.
3. Hold column and base together, and carefully turn the lamp onto its side. Slide washer (H) onto threaded tube (G). Thread nut (I) onto tube (G) and tighten with wrench (L).
4. Carefully turn lamp into upright position.
5. Remove finial (A) from harp (C).
6. Squeeze harp (C) inward and place into the opening of saddle (D).
7. Place shade (B) onto harp (C).
8. Screw finial (A) onto harp (C) to secure shade to lamp.
9. Install one (1) 150W MAX. Type A bulb into socket.
10. Remove protective plastic (K) from polarized plug (J). Insert polarized plug (J) into wall outlet.

* To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. *