


ASSEMBLY INSTRUCTIONS

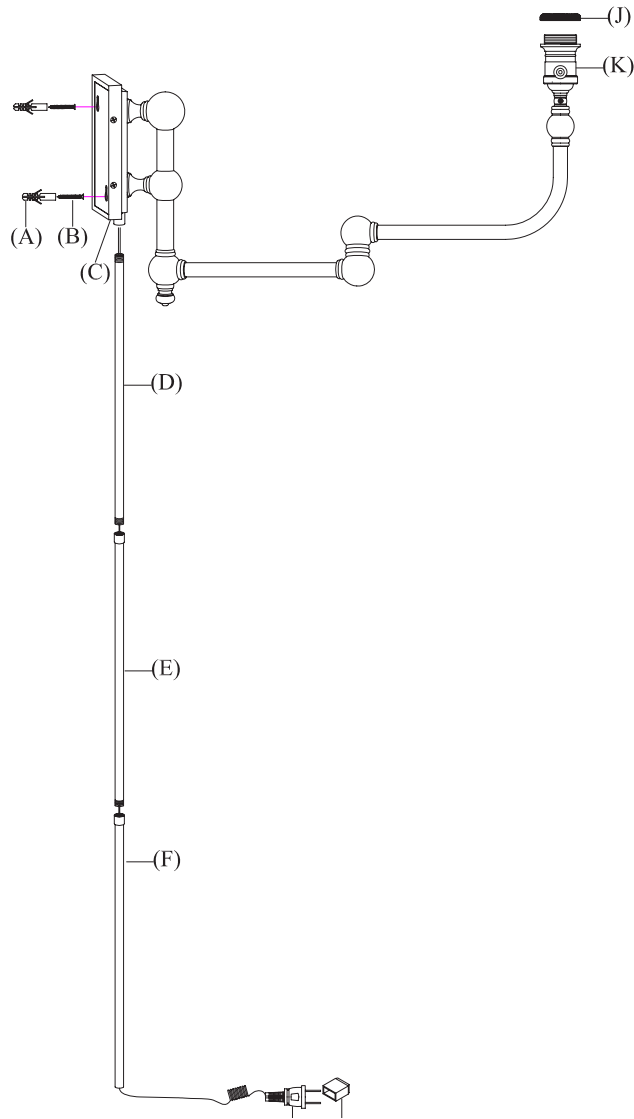

Pimlico Swing Arm

Item # CHD2154

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove the mounting plate (B) from the base of the lighting fixture (D) by removing the base screws (A).
2. Affix the mounting plate (B) to the wall outlet box with the mounting plate screws (C).
3. Attach fixture (D) to the mounting plate (B). Tighten fixture (D) with the base screws (A).
4. Attach cord cover (E) to bottom of light base by turning (E) in counter-clockwise direction.
5. Attach cord cover (F) to bottom of (E) by turning (F) in counter-clockwise direction, attach cord cover (G) to bottom of (F) by turning (G) in counter-clockwise direction.
6. Remove socket ring (J) onto the top of socket (H).
7. Put shade (I) onto the top of socket and tighten with socket ring (J).
8. Insert light bulb (not included) into socket.
9. Plug lamp into wall outlet.



VISUAL COMFORT & Co.

ASSEMBLY INSTRUCTIONS

Pimlico Swing Arm


Item # CHD2154

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

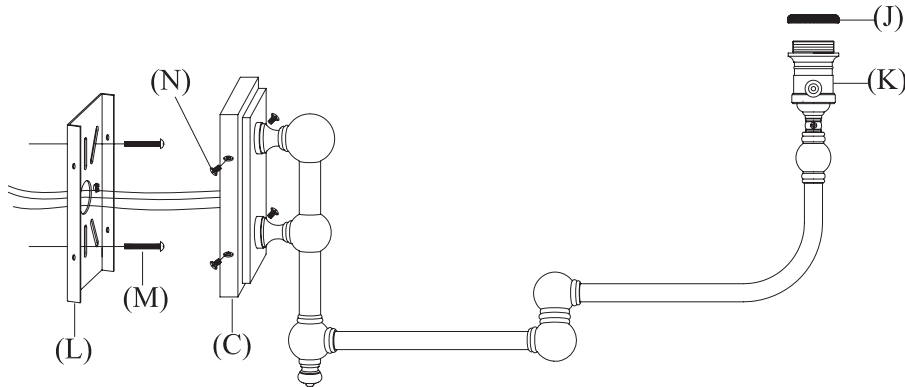

1. Follow step 1 of first page - Cord Cover Assembly.
2. Guide wiring from wall outlet through center hole in mounting plate (L).
3. Affix mounting plate (L) to wall outlet box with mounting screws (M) provided.
4. Cut fixture cord twelve inches away from fixture base (C) and remove by grasping plug (H) and pulling out of cord cover (D, E, & F).
5. Connect the ground screw (green color) of the fixture to the bare copper ground wire in the outlet box. The insulation on the fixture cord that was cut to twelve inches in length in step 3 has a smooth side and a ribbed side.
6. Connect the smooth wire to the black wire in the outlet box (not shown in diagram)
7. Connect the ribbed wire to the white wire in the outlet box.
8. Attach fixture base (C) to the affixed mounting plate (L), and secure with base screws (N).
9. Follow steps 7 & 8 of page 1 - Cord Cover Assembly.



VISUAL COMFORT & Co.